Step 6. Cable Management - Ensure Arm is fully extended.

Route the Cables underneath the Arms, inserting the Primary and Secondary Arm Cable Covers to hold the Cables in place.

TIP: Leave enough slack in the cables at the joints to allow full movement.

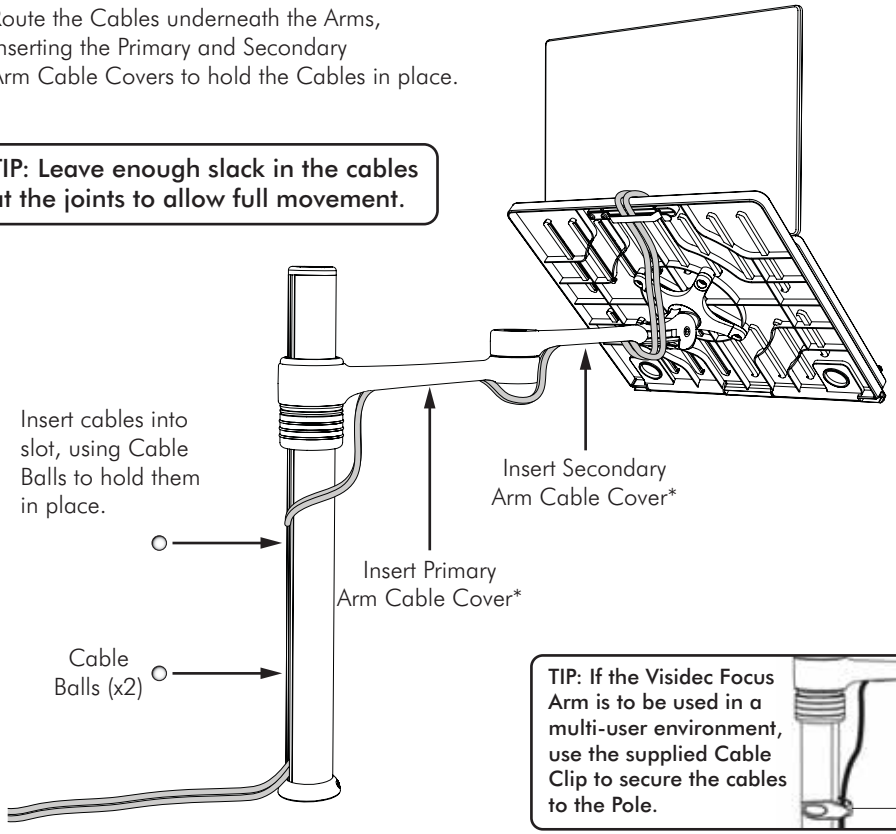
Insert cables into slot, using Cable Balls to hold them in place.
Insert Secondary Arm Cable Cover*
Insert Primary Arm Cable Cover*
Cable Balls (x2)

TIP: If the Visidec Focus Arm is to be used in a multi-user environment, use the supplied Cable Clip to secure the cables to the Pole.

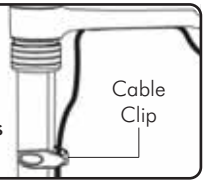

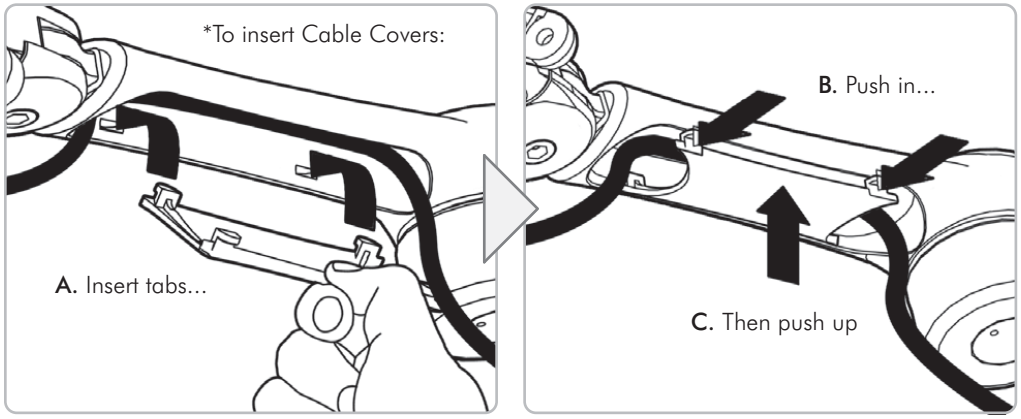

Installation Complete

Your Visidec Focus Notebook Mount installation is complete and ready for use.

Due to continuing product development, the manufacturer reserves the right to alter specifications without notice. Published: 22.04.09 ©

IMPORTANT:
The "User Operating Card" must be left with Visidec Focus Articulated Arm once installed.

VF-AT-NP

Installation Instructions

VISIDEC

Focus Notebook Mount

Component Checklist

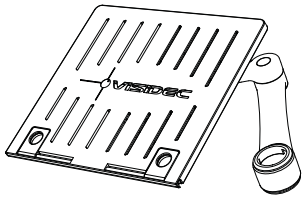

Notebook Tray and Arm Assembly

Pole Assembly

TOOLS REQUIRED:
- Power Drill
- 9mm (3/8") Drill Bit

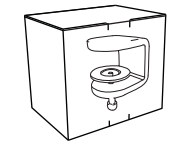

Desk Clamp



Hardware

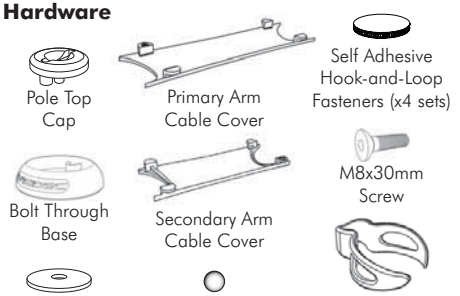

IMPORTANT INFORMATION

! **IMPORTANT - Install Visidec Focus Notebook Mount as per Installation Instructions.**
! **This product is designed to be used in conjunction with an external keyboard and mouse.**
! Visidec Focus Notebook Mount supports Notebooks up to 18", weighing up to 8kg (17 1/2lbs).
! The Manufacturer accepts no responsibility for incorrect installation.

Step 1. Check Components

Check you have received all parts against the Component Checklist and Hardware above.

Step 2. Desk Mounting (Bolt Through or Desk Clamp)

Option A - Bolt Through

Drill a 9mm (3/8") hole in the Work Surface at the desired position and assemble as shown.

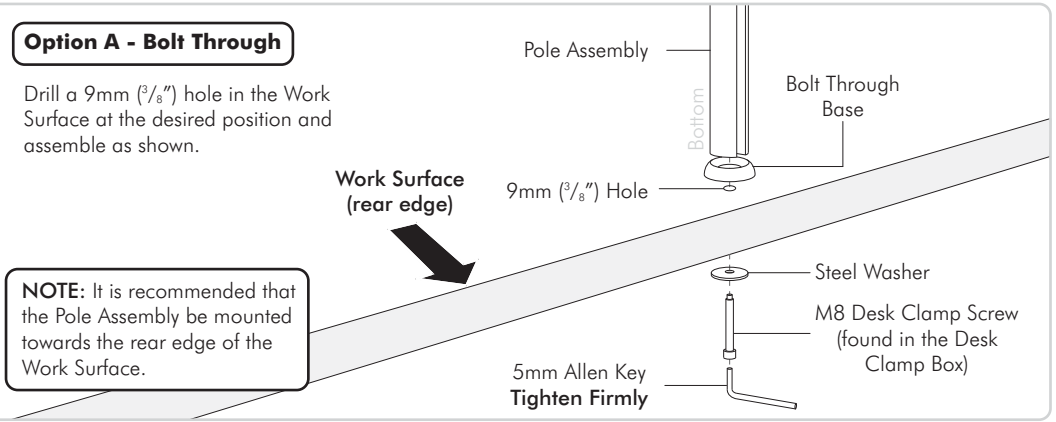

NOTE: It is recommended that the Pole Assembly be mounted towards the rear edge of the Work Surface.

Step 2. Desk Mounting (Bolt Through or Desk Clamp)

Option B - Desk Clamp

Attach the Desk Clamp Bracket to the bottom of the Pole Assembly using the M8x30mm Screw. **Tighten Firmly.**

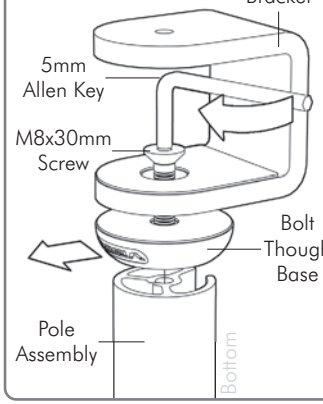

Install the M8 Desk Clamp Screw and Pressure Plate as shown.

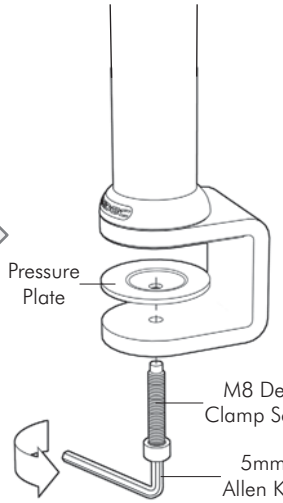

Adjust the height of the Pressure Plate to suit the Work Surface and **Tighten Firmly** in desired location.

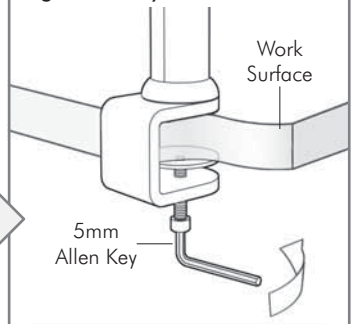

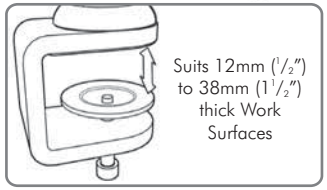

Step 3. Attach the Arm Assembly onto the Pole Assembly

A. Unlock the Handgrip

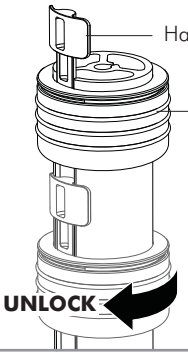

B. Slide Handgrip to the top of the Visidec Pole so the Handgrip Tab protrudes

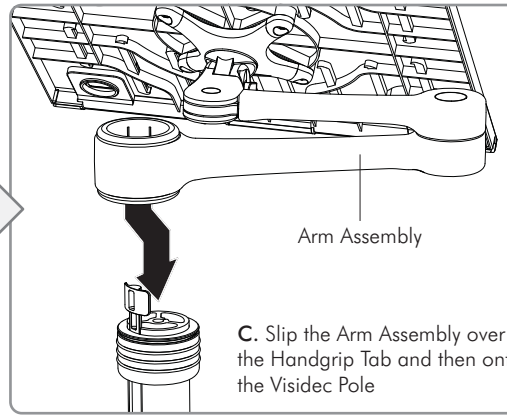

C. Slip the Arm Assembly over the Handgrip Tab and then onto the Visidec Pole

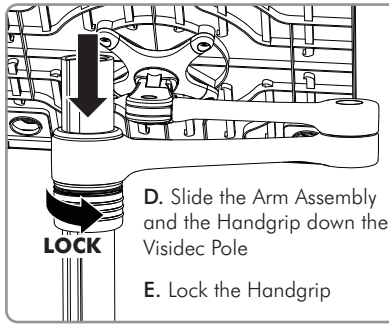

D. Slide the Arm Assembly and the Handgrip down the Visidec Pole

E. Lock the Handgrip

F. Insert the Pole Top Cap into the top of the Visidec Pole

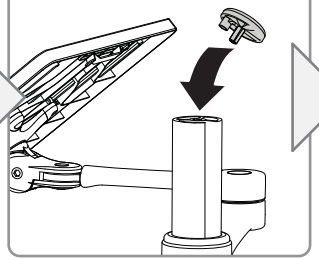

G. Insert the 5mm Allen Key into the slot in the Pole Top Cap

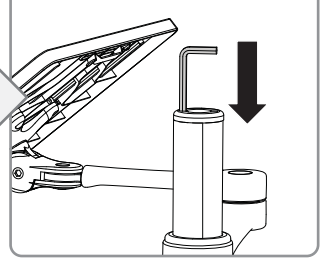

Step 4. Install the Notebook Computer

A. Adjust the Support Tabs to suit the width of your Notebook Computer.

NOTE: Ensure that the Support Tabs do not obstruct any cable ports.

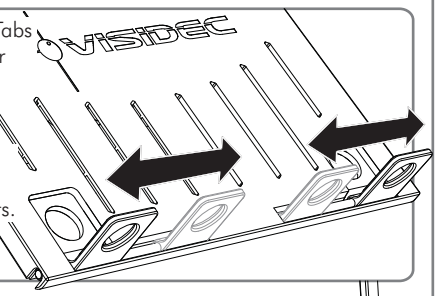

B. To increase stability, use the Self Adhesive Hook-and-Loop Fasteners supplied:

- Peel off the backing paper from the Fasteners.
- Attach Fasteners to your Notebook Computer and the Notebook Tray.
- Ensure that each set of Fasteners are correctly aligned, i.e. Hook to Loop.

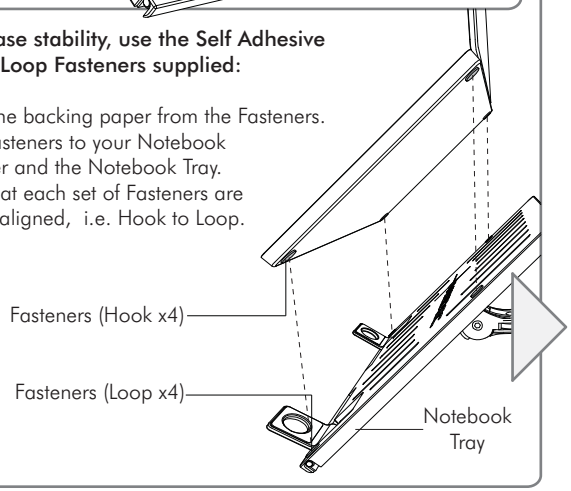

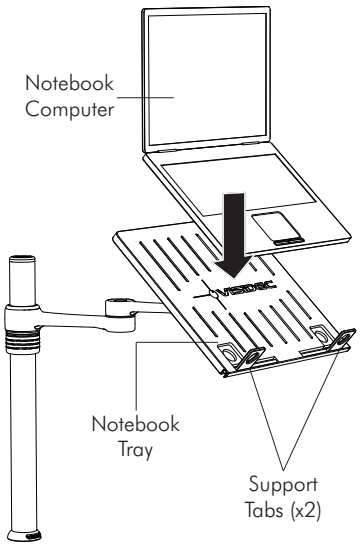

C. Position your Notebook Computer onto the Notebook Tray.

Step 5. Connect Cables

Connect cables to your Notebook Computer.

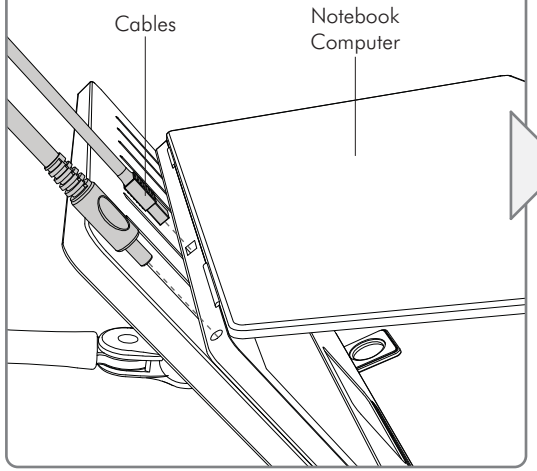

Lift the Cable Management Clip on the back of the Notebook Tray, and route the Cables underneath. Release the Clip to hold the Cables in place.